

# **Lx6&LC86L&LG77L**

## **Firmware Upgrade Guide**

**GNSS Module Series**

Version: 1.2

Date: 2023-12-22

Status: Released



At Quectel, our aim is to provide timely and comprehensive services to our customers. If you require any assistance, please contact our headquarters:

**Quectel Wireless Solutions Co., Ltd.**

Building 5, Shanghai Business Park Phase III (Area B), No.1016 Tianlin Road, Minhang District, Shanghai 200233, China

Tel: +86 21 5108 6236

Email: [info@quectel.com](mailto:info@quectel.com)

**Or our local offices. For more information, please visit:**

<http://www.quectel.com/support/sales.htm>.

**For technical support, or to report documentation errors, please visit:**

<http://www.quectel.com/support/technical.htm>.

Or email us at: [support@quectel.com](mailto:support@quectel.com).

## Legal Notices

We offer information as a service to you. The provided information is based on your requirements and we make every effort to ensure its quality. You agree that you are responsible for using independent analysis and evaluation in designing intended products, and we provide reference designs for illustrative purposes only. Before using any hardware, software or service guided by this document, please read this notice carefully. Even though we employ commercially reasonable efforts to provide the best possible experience, you hereby acknowledge and agree that this document and related services hereunder are provided to you on an “as available” basis. We may revise or restate this document from time to time at our sole discretion without any prior notice to you.

## Use and Disclosure Restrictions

### License Agreements

Documents and information provided by us shall be kept confidential, unless specific permission is granted. They shall not be accessed or used for any purpose except as expressly provided herein.

### Copyright

Our and third-party products hereunder may contain copyrighted material. Such copyrighted material shall not be copied, reproduced, distributed, merged, published, translated, or modified without prior written consent. We and the third party have exclusive rights over copyrighted material. No license shall be granted or conveyed under any patents, copyrights, trademarks, or service mark rights. To avoid ambiguities, purchasing in any form cannot be deemed as granting a license other than the normal non-exclusive, royalty-free license to use the material. We reserve the right to take legal action for noncompliance with abovementioned requirements, unauthorized use, or other illegal or malicious use of the material.

## Trademarks

Except as otherwise set forth herein, nothing in this document shall be construed as conferring any rights to use any trademark, trade name or name, abbreviation, or counterfeit product thereof owned by Quectel or any third party in advertising, publicity, or other aspects.

## Third-Party Rights

This document may refer to hardware, software and/or documentation owned by one or more third parties (“third-party materials”). Use of such third-party materials shall be governed by all restrictions and obligations applicable thereto.

We make no warranty or representation, either express or implied, regarding the third-party materials, including but not limited to any implied or statutory, warranties of merchantability or fitness for a particular purpose, quiet enjoyment, system integration, information accuracy, and non-infringement of any third-party intellectual property rights with regard to the licensed technology or use thereof. Nothing herein constitutes a representation or warranty by us to either develop, enhance, modify, distribute, market, sell, offer for sale, or otherwise maintain production of any our products or any other hardware, software, device, tool, information, or product. We moreover disclaim any and all warranties arising from the course of dealing or usage of trade.

## Privacy Policy

To implement module functionality, certain device data are uploaded to Quectel’s or third-party’s servers, including carriers, chipset suppliers or customer-designated servers. Quectel, strictly abiding by the relevant laws and regulations, shall retain, use, disclose or otherwise process relevant data for the purpose of performing the service only or as permitted by applicable laws. Before data interaction with third parties, please be informed of their privacy and data security policy.

## Disclaimer

- a) We acknowledge no liability for any injury or damage arising from the reliance upon the information.
- b) We shall bear no liability resulting from any inaccuracies or omissions, or from the use of the information contained herein.
- c) While we have made every effort to ensure that the functions and features under development are free from errors, it is possible that they could contain errors, inaccuracies, and omissions. Unless otherwise provided by valid agreement, we make no warranties of any kind, either implied or express, and exclude all liability for any loss or damage suffered in connection with the use of features and functions under development, to the maximum extent permitted by law, regardless of whether such loss or damage may have been foreseeable.
- d) We are not responsible for the accessibility, safety, accuracy, availability, legality, or completeness of information, advertising, commercial offers, products, services, and materials on third-party websites and third-party resources.

**Copyright © Quectel Wireless Solutions Co., Ltd. 2023. All rights reserved.**

# About the Document

## Document Information

<b>Title</b>	<b>Lx6&amp;LC86L&amp;LG77L Firmware Upgrade Guide</b>
<b>Subtitle</b>	GNSS Module Series
<b>Document Type</b>	Firmware Upgrade Guide
<b>Document Status</b>	Released

## Revision History

<b>Version</b>	<b>Date</b>	<b>Description</b>
1.0	2018-08-23	Initial
1.1	2021-06-21	Added applicable modules L26-LB, L76-LB, LC86L and LG77L.
1.2	2023-12-22	Added upgrade example by QGNSS ( <a href="#">Chapter 4</a> ).

## Contents

About the Document.....	3
Contents .....	4
Figure Index .....	5
<b>1 Introduction .....</b>	<b>6</b>
<b>2 Firmware Upgrade Procedure .....</b>	<b>7</b>
2.1. CMD_Start (Start Upgrade Procedure).....	7
2.2. CMD_Write (Write DA to SRAM) .....	8
2.3. CMD_Jump (Jump to DA Start Address).....	9
2.4. CMD_Sync (Report Flash Information).....	10
2.5. CMD_SetMemBlock (Set Memory Block).....	11
2.6. CMD_WriteData (Write BIN File to Module Flash) .....	12
2.7. CMD_Finish (Finish Upgrade Procedure) .....	14
<b>3 Upgrade Implementation Example.....</b>	<b>15</b>
<b>4 Upgrade Example by QGNSS .....</b>	<b>19</b>
<b>5 Appendix A Reference.....</b>	<b>24</b>

## Figure Index


Figure 1: Firmware Upgrade Connection.....	6
Figure 2: Flow of CMD_Start.....	7
Figure 3: Flow of CMD_Write.....	8
Figure 4: Flow of CMD_Jump .....	9
Figure 5: Flow of CMD_Sync .....	11
Figure 6: Flow of CMD_SetMemBlock.....	12
Figure 7: Flow of CMD_WriteData .....	13
Figure 8: Flow of CMD_Finish.....	14
Figure 9: Device Manager.....	19
Figure 10: Device Information .....	20
Figure 11: Firmware Download .....	20
Figure 12: Load Firmware .....	21
Figure 13: DA File Selection .....	21
Figure 14: Firmware Selection .....	21
Figure 15: Reset the Module.....	22
Figure 16: Waiting for Upgrading to Complete .....	22
Figure 17: Firmware Upgrade Completed.....	23

# 1 Introduction

Quectel GNSS modules support FOTA function, which allows you to upgrade the firmware of the modules over the air. This document introduces the detailed firmware upgrade procedures, through which you can download the built image to the module via UART.

The document is applicable to the following Quectel GNSS modules:

- L26
- L26-LB
- L76
- L76-L
- L76-LB
- L86
- L96
- LC86L
- LG77L

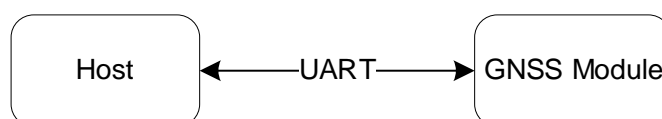

**Figure 1: Firmware Upgrade Connection**

## 2 Firmware Upgrade Procedure

The whole procedure has two stages:

**Stage 1:** Download DA to the internal SRAM, and then jump to DA start address to execute DA in the internal SRAM.

**Stage 2:** Download BIN file to the flash, then jump to the flash start address to execute the file.

### 2.1. CMD\_Start (Start Upgrade Procedure)

After the GNSS module is powered on, the host sequentially sets 7 baud rates for serial communication and sends the NMEA\_START\_CMD \$PMTK180\*3B\r\n at each baud rate to force the module to reset. Then the host settles at the right baud rate to establish communication and the module starts the upgrade procedure.

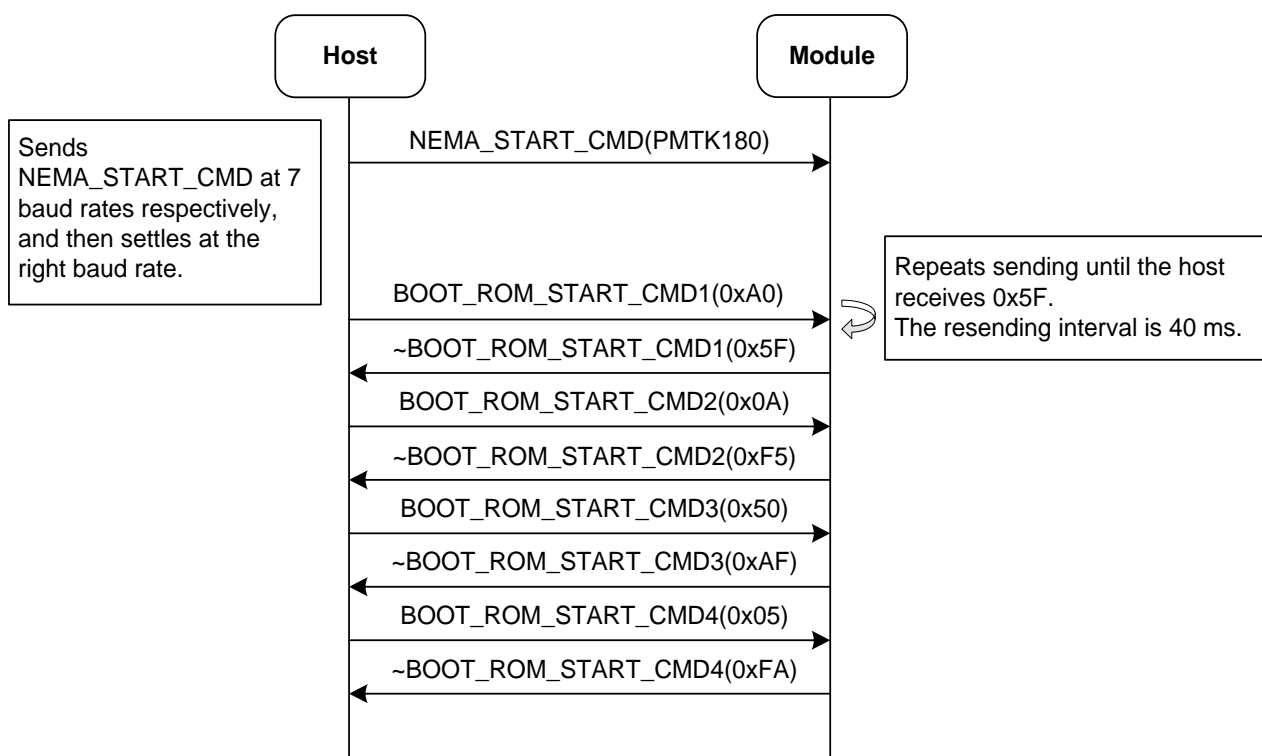


Figure 2: Flow of CMD\_Start



**NOTE**

The 7 baud rates are 4800 bps, 9600 bps, 14400 bps, 19200 bps, 38400 bps, 57600 bps and 115200 bps.

## 2.2. CMD\_Write (Write DA to SRAM)

During this procedure, DA will be written to SRAM.

The Download Agent (DA) is an application that allows to perform the flash download via serial interface. After DA is successfully downloaded and running on target modules, it will be standby and passively waiting for the host to issue firmware upgrade commands via UART.

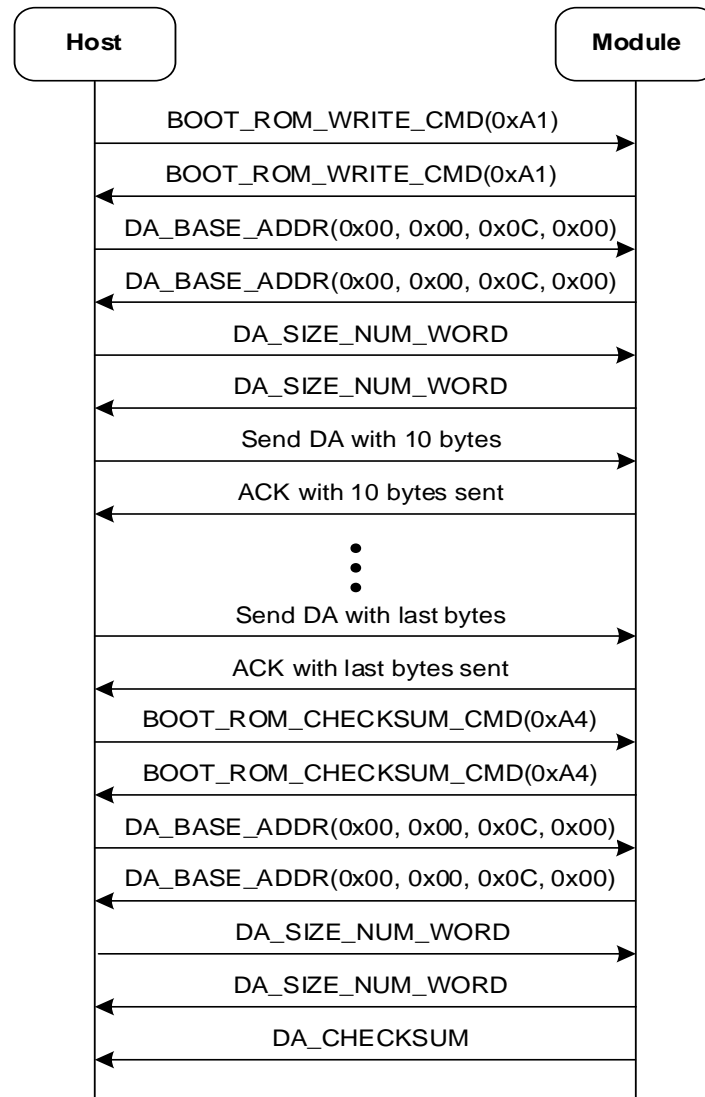


Figure 3: Flow of CMD\_Write


**NOTE**

1. DA\_SIZE\_NUM\_WORD is four bytes in big-endian mode.
2. DA\_CHECKSUM is two bytes.

**Sample Code for DA File Checksum**

```
uint16_t DA_CHECKSUM (uint8_t *buf, uint32_t buf_len)
{
    uint16_t checksum = 0;
    if (buf == NULL || buf_len == 0)
    {
        return 0;
    }
    int i = 0;
    for (i = 0; i < buf_len / 2; i++)
    {
        checksum ^= *(uint16_t *) (buf + i * 2);
    }
    if ((buf_len % 2) == 1)
    {
        checksum ^= buf[i * 2];
    }
    return checksum;
}
```

### 2.3. CMD\_Jump (Jump to DA Start Address)

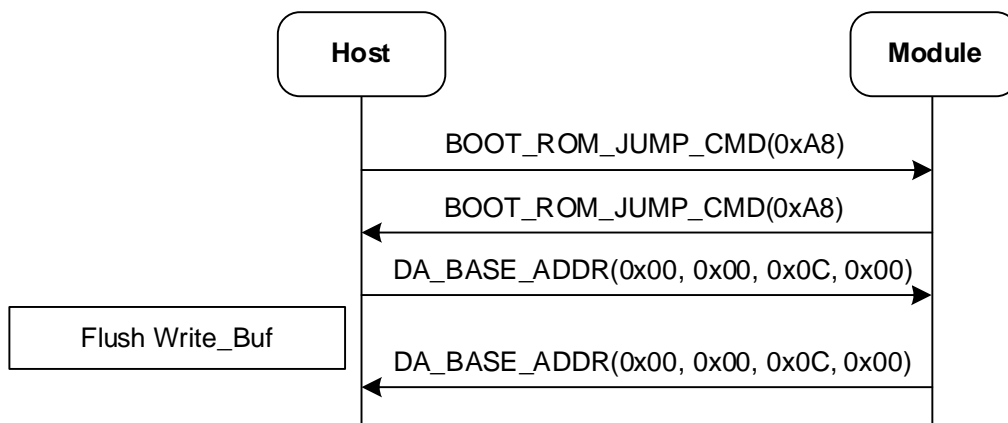

**Figure 4: Flow of CMD\_Jump**

## 2.4. CMD\_Sync (Report Flash Information)

When DA is downloaded and executed, it will actively report one byte **SYNC\_CHAR**, two-byte **DA\_VERSION**, one byte **FLASH\_DEVICE\_ID**, four-byte **FLASH\_SIZE**, eight-byte **FLASH\_HW\_ID** and four-byte **EXT\_SRAM\_SIZE**.

- **SYNC\_CHAR**

When DA is executed, it returns **SYNC\_CHAR** (0xC0). If the returned byte is not **SYNC\_CHAR**, then a wrong DA is downloaded probably.

- **DA\_VERSION**

After **SYNC\_CHAR** is returned, DA will return its version number. The version number contains two bytes, which are major version and minor version, respectively. The relevant program in the host should check whether it supports this DA.

- **FLASH\_DEVICE\_ID**

After the DA version is reported, DA will automatically detect the flash type on the module.

- **FLASH\_SIZE**

Four bytes flash size. For example, 128 Mbits flash will be 0x01000000 bytes, and DA will send 0x01, 0x00, 0x00, and 0x00.

- **FLASH\_MANUFACTURE\_CODE**

Two bytes flash manufacture code.

- **FLASH\_DEVICE\_CODE**

Two bytes flash device code.

- **FLASH\_EXT\_DEVICE\_CODE1**

Two bytes flash extended device code 1.

- **FLASH\_EXT\_DEVICE\_CODE2**

Two bytes flash extended device code 2.

- **EXT\_SRAM\_SIZE**

Four bytes external SRAM size. For example, 64 Mbits external SRAM will be 0x00800000 bytes, and DA will send 0x00, 0x80, 0x00 and 0x00.

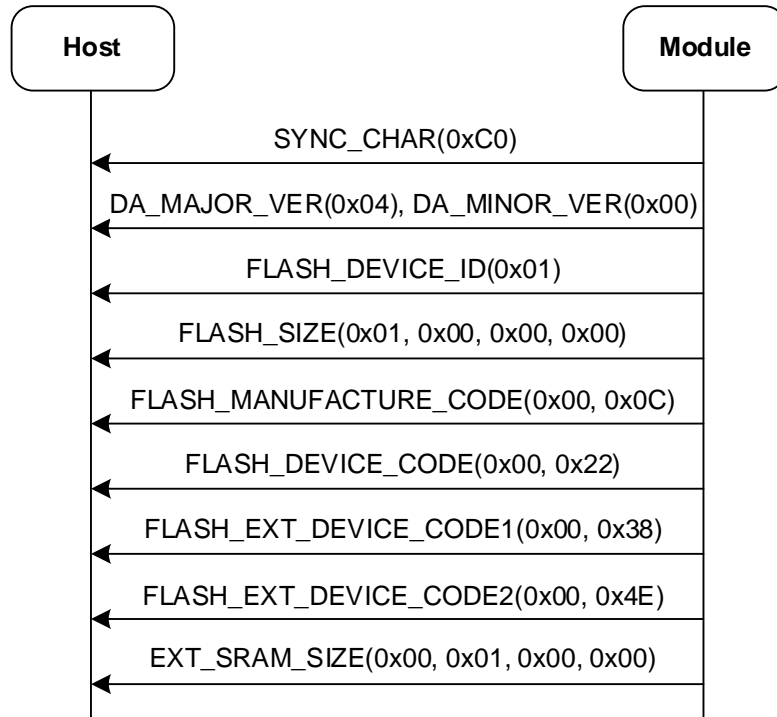


Figure 5: Flow of CMD\_Sync

**NOTE**

The flash related information is fixed for handshake authorization, not real flash information.

## 2.5. CMD\_SetMemBlock (Set Memory Block)

The commands are used to notify DA the total memory block count and the range for each block. The block information indicates how many BIN files will be downloaded and the range of each BIN file.

If any memory block exceeds the flash size, DA will return **NACK** (0xA5) to indicate the **DA\_MEM\_CMD** command is failed. If all the download memory blocks are valid, DA will return **ACK** (0x5A) and **UNCHANGED\_BLOCK\_COUNT**.

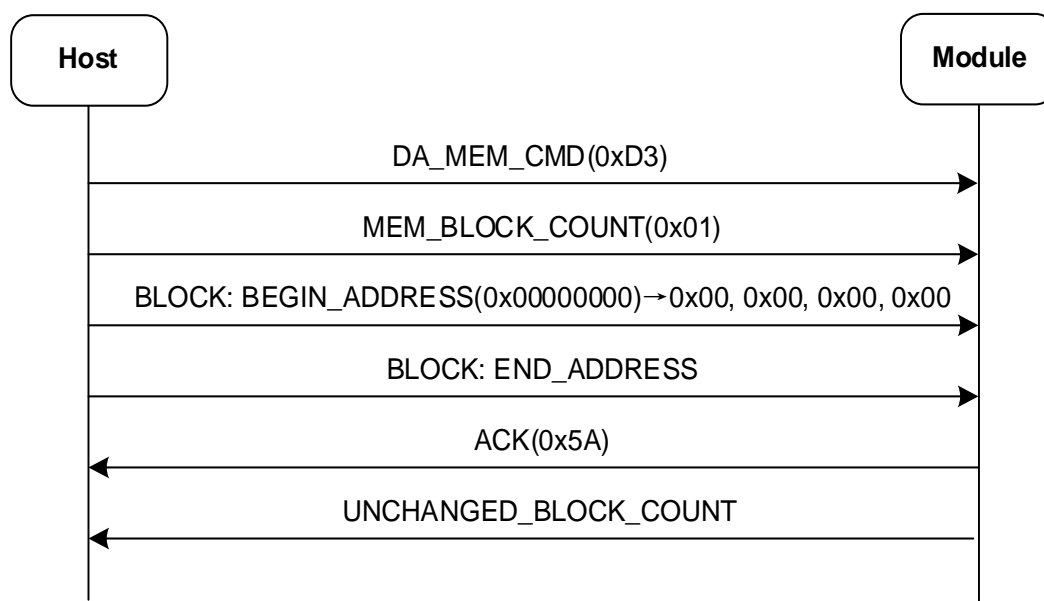



Figure 6: Flow of CMD\_SetMemBlock

**NOTE**

END\_ADDRESS = BEGIN\_ADDRESS + GNSS BIN File Size - 1

## 2.6. CMD\_WriteData (Write BIN File to Module Flash)

The commands are used to write all the data of BIN file to module flash. Every packet has a fixed length, that is **PACKET\_LENGTH** plus two bytes checksum. As the last packet is usually not enough for **PACKET\_LENGTH**, the relevant program in the host should send the actual data length plus two bytes checksum.

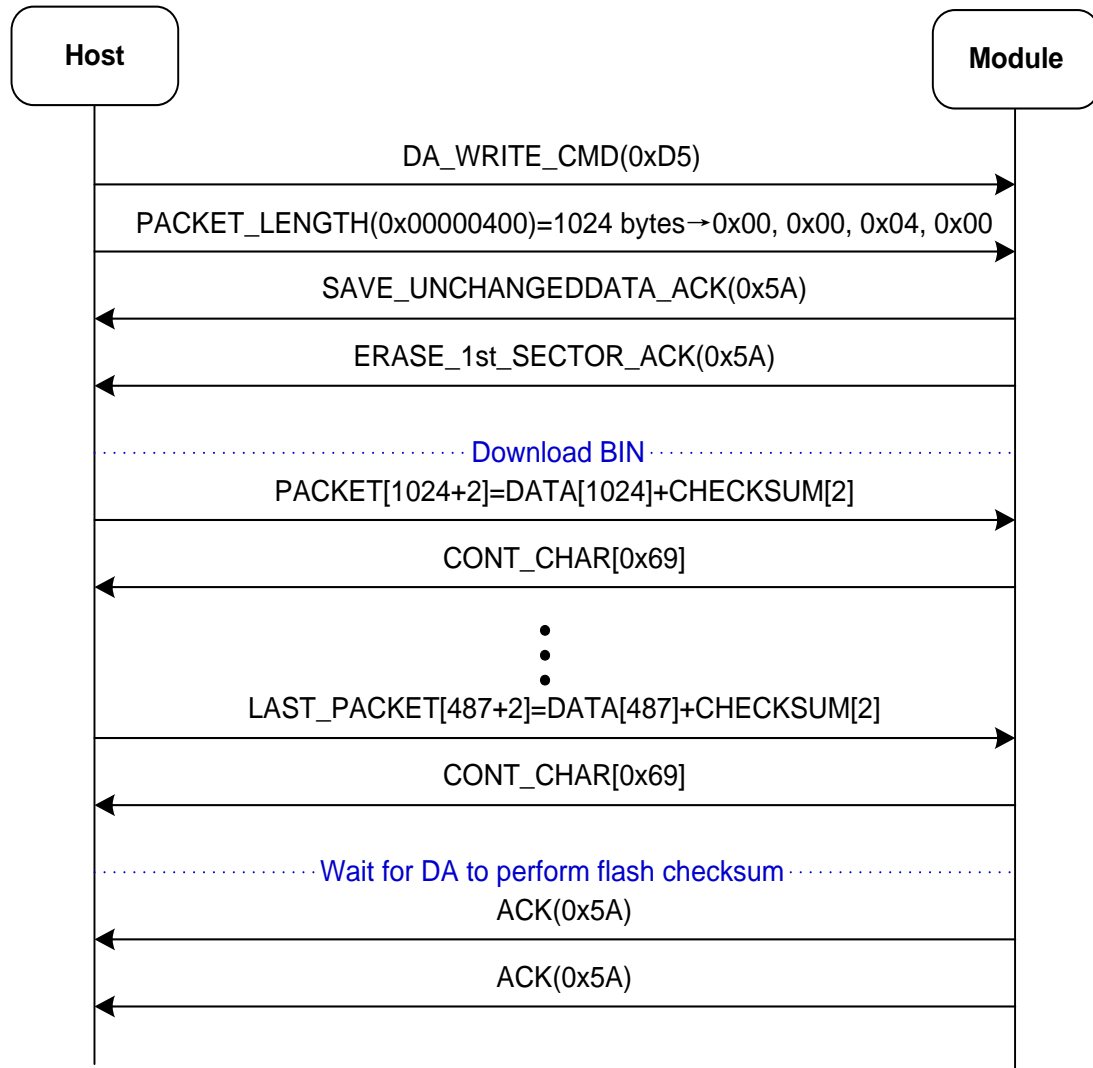

**Figure 7: Flow of CMD\_WriteData**


### The Sample Code for Checksum

```

uint16 DATA_CHECKSUM(uint8_t *buf, uint32_t buf_len)
{
    uint16 checksum = 0;
    int i;
    for(i=0; i< buf_len;i++)
    {
        checksum += *(buf + i);
    }
    return checksum;
}
    
```

## 2.7. CMD\_Finish (Finish Upgrade Procedure)

The command is used to make the module restart and output NMEA sentences. The firmware upgrade procedure is thus finished.

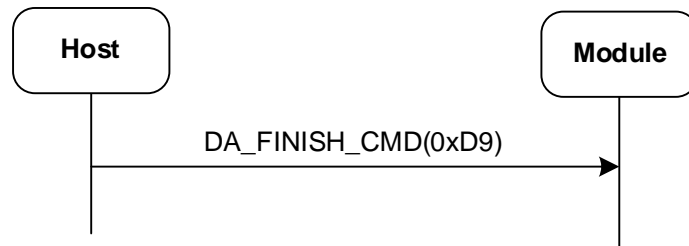

**Figure 8: Flow of CMD\_Finish**

# 3 Upgrade Implementation Example

In this chapter you can find the example of firmware upgrade procedure.

## //Figure 2: Flow of CMD\_Start

//Host sends \$PMTK180\*3B for seven times.

**24 50 4D 54 4B 31 38 30 2A 33 42 0D 0A**

//Host continuously sends 0xA0

**A0**

**A0**

**A0**

...

**A0**

**A0**

**A0**

**A0**

//Module responds with 0x5F

**5F**

//Host sends 0x0A

**0A**

//Module responds with 0xF5

**F5**

//Host sends 0x50

**50**

//Module responds with 0xAF

**AF**

//Host sends 0x05

**05**

//Module responds with 0xFA

**FA**

## //Figure 3: Flow of CMD\_Write

//Host sends 0xA1

**A1**

//Module responds with 0xA1

**A1**

//Host sends 0x00000C00

**00 00 0C 00**

//Module responds with 0x00000C00



```

00 00 0C 00
//Host sends 0x0000173A
00 00 17 3A
//Module responds with 0x0000173A
00 00 17 3A
//Host sends 10 bytes
00 00 E1 A0 00 00 E1 0F 10 C0
//Module responds with 10 bytes
00 00 E1 A0 00 00 E1 0F 10 C0
//Host sends 10 bytes
E3 A0 00 01 E1 80 F0 00 E1 2F
//Module responds with 10 bytes
E3 A0 00 01 E1 80 F0 00 E1 2F
//Host sends 10 bytes
10 00 E3 A0 19 02 E2 81 10 04
//Module responds with 10 bytes
E3 A0 00 01 E1 80 F0 00 E1 2F
.....
//Host sends 10 bytes
00 00 00 00 00 00 00 00 00 00
//Module responds with 10 bytes
00 00 00 00 00 00 00 00 00 00
//Host sends 10 bytes
00 00 00 00 00 00 00 00 00 00
//Module responds with 10 bytes
00 00 00 00 00 00 00 00 00 00
//Host sends 0x0000
00 00
//Module responds with 0x0000
00 00
//Host sends 0xA4
A4
//Module responds with 0xA4
A4
//Host sends 0x00000C00
00 00 0C 00
//Module responds with 0x00000C00
00 00 0C 00
//Host sends 0x0000173A
00 00 17 3A
//Module responds with 0x0000173A
00 00 17 3A
//Module responds with DA_CHECKSUM
67 8D (Sample Code for DA File)

```



```
//Host sends firmware packet (1024 Bytes) and checksum (2 Bytes)
90 00 00 EB FE FF FF EA 0E 60 A0 E1 00 40 0F E1 80 40 84 E3 40 40 84 E3 1F 4- C4 E3 .....
A9 2D (The Sample Code for Checksum)
//Module responds with 0x69
69
.....
//Host sends firmware packet (1024 Bytes) and checksum (2 Bytes)
06 10 A0 E1 05 00 A0 E1 F9 F9 FF EB 07 10 04 E0 00 50 A0 E1 07 00 A0 E1 CF F9 FF .....
99 CE (The Sample Code for Checksum)
//Module responds with 0x69
69
//Host sends firmware packet (1024 Bytes) and checksum (2 Bytes)
1B C0 A0 E3 01 20 A0 D3 02 1A 81 E1 04 F9 FF EA 06 2C 42 E2 02 3B 42 E2 01 30 93 E2 .....
91 E8 (The Sample Code for Checksum)
//Module responds with 0x69
69
//Module responds with 0x5A5A
5A 5A


//Figure 8: Flow of CMD\_Finish
//Host sends 0xD9
D9
```

# 4 Upgrade Example by QGNSS

This section provides a step-by-step guide to upgrading firmware via QGNSS, taking L96 as an example.


## Tips:

1. Before initiating the firmware upgrade, ensure that the module is connected to the PC and powered on normally as shown in [Figure 9: Device Manager](#).
2. For this procedure, it is imperative to utilize QGNSS V1.9 or higher versions.

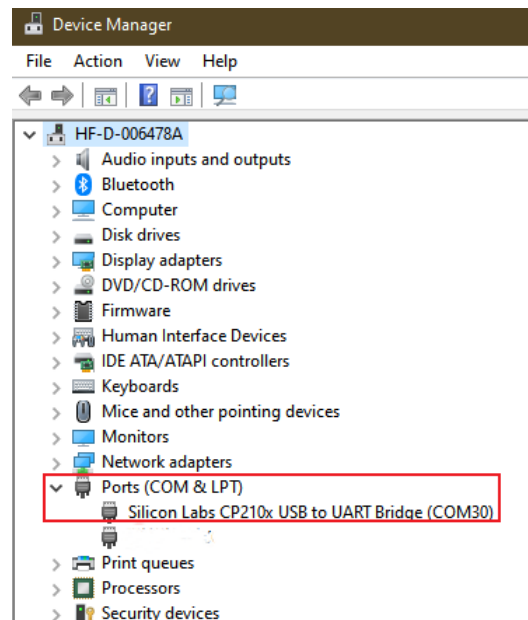

**Figure 9: Device Manager**

**Firmware upgrade steps are as follows:**


**Step 1:** Open QGNSS tool and click  to enter the “**Device Information**” window as shown in [Figure 10: Device Information](#).

**Step 2:** Choose the module to be upgraded.

**Step 3:** Choose port number.

**Step 4:** Choose baudrate. Default baudrate: 9600 bps.


**Step 5:** Click “OK”.

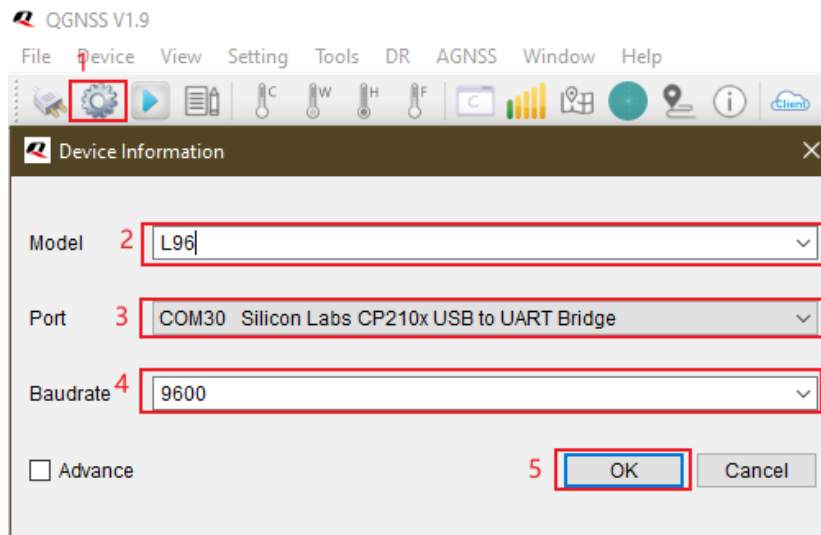


**Figure 10: Device Information**


**Step 6:** Click “Tools” as shown in [Figure 11: Firmware Download](#).

**Step 7:** Choose “Firmware Download” in the drop-down menu of “Tools”.

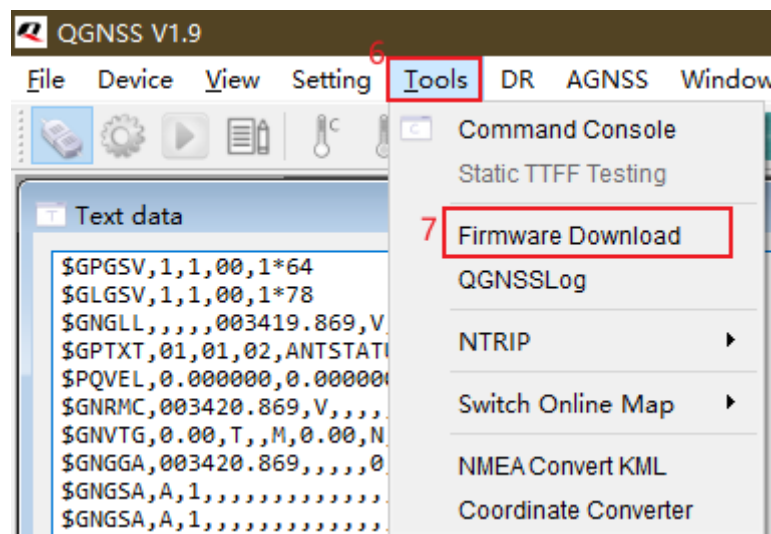

**Figure 11: Firmware Download**

**Step 8:** In the new window, click  to choose the DA file as shown in [Figure 12: Load Firmware](#) and [Figure 13: DA File Selection](#).

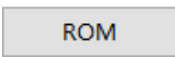**Step 9:** Click  to choose the firmware upgrade package as shown in [Figure 12: Load Firmware](#) and [Figure 14: Firmware Selection](#).

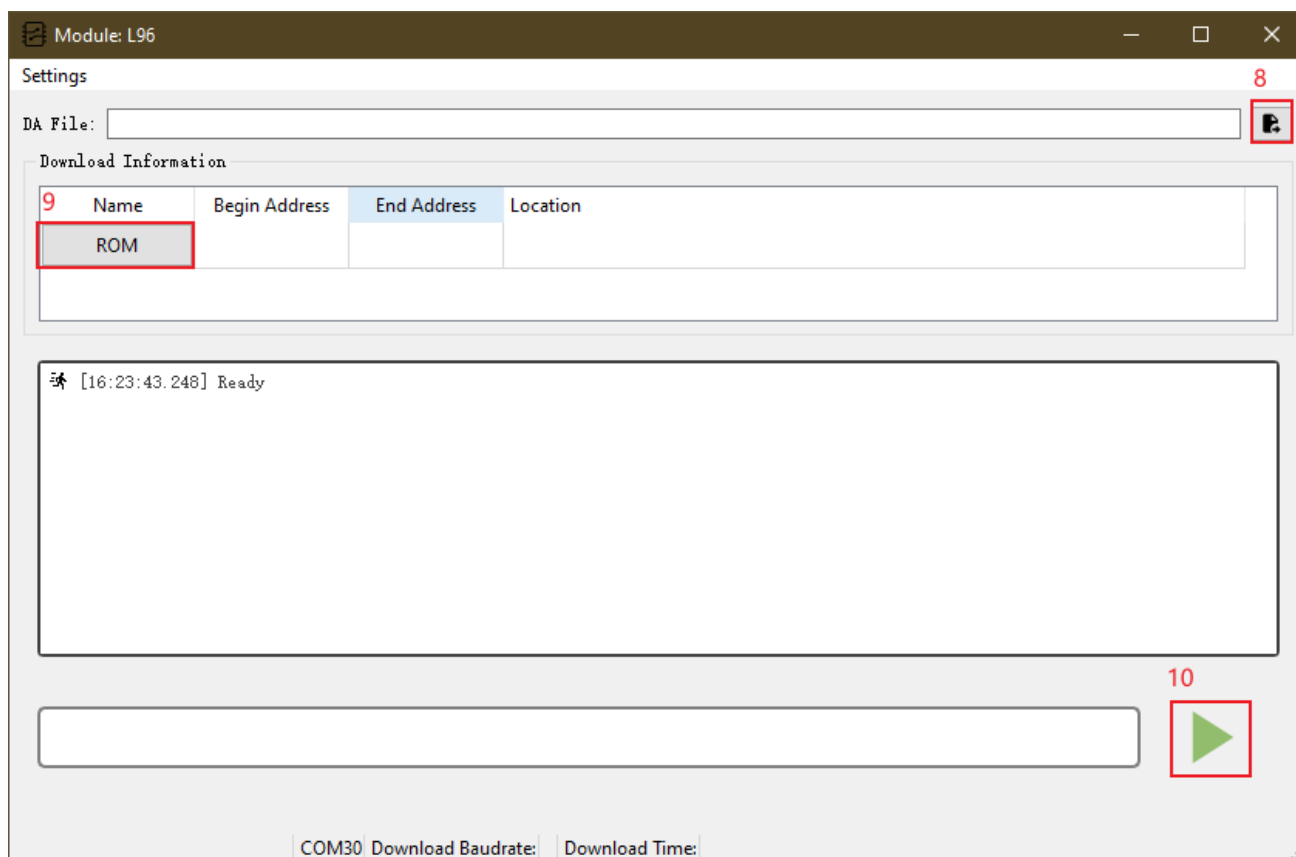


Figure 12: Load Firmware



 L96NR11A02S.bin	5/19/2023 6:05 PM	BIN File	666 KB
 MTK_AllInOne_DA_MT3333.bin	5/19/2023 4:33 PM	BIN File	12 KB

Figure 13: DA File Selection




 L96NR11A02S.bin	5/19/2023 6:05 PM	BIN File	666 KB
 MTK_AllInOne_DA_MT3333.bin	5/19/2023 4:33 PM	BIN File	12 KB

Figure 14: Firmware Selection

**Step 10:** Click  to initiate the firmware upgrade process and a new dialog box will pop up as shown in [Figure 15: Reset the Module](#). Follow the tips to complete the firmware upgrade process.

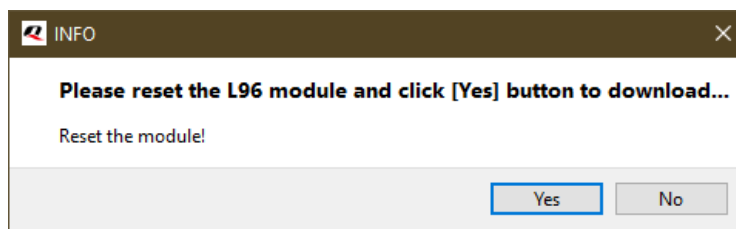


Figure 15: Reset the Module

**Step 11:**Waiting for upgrading to complete.

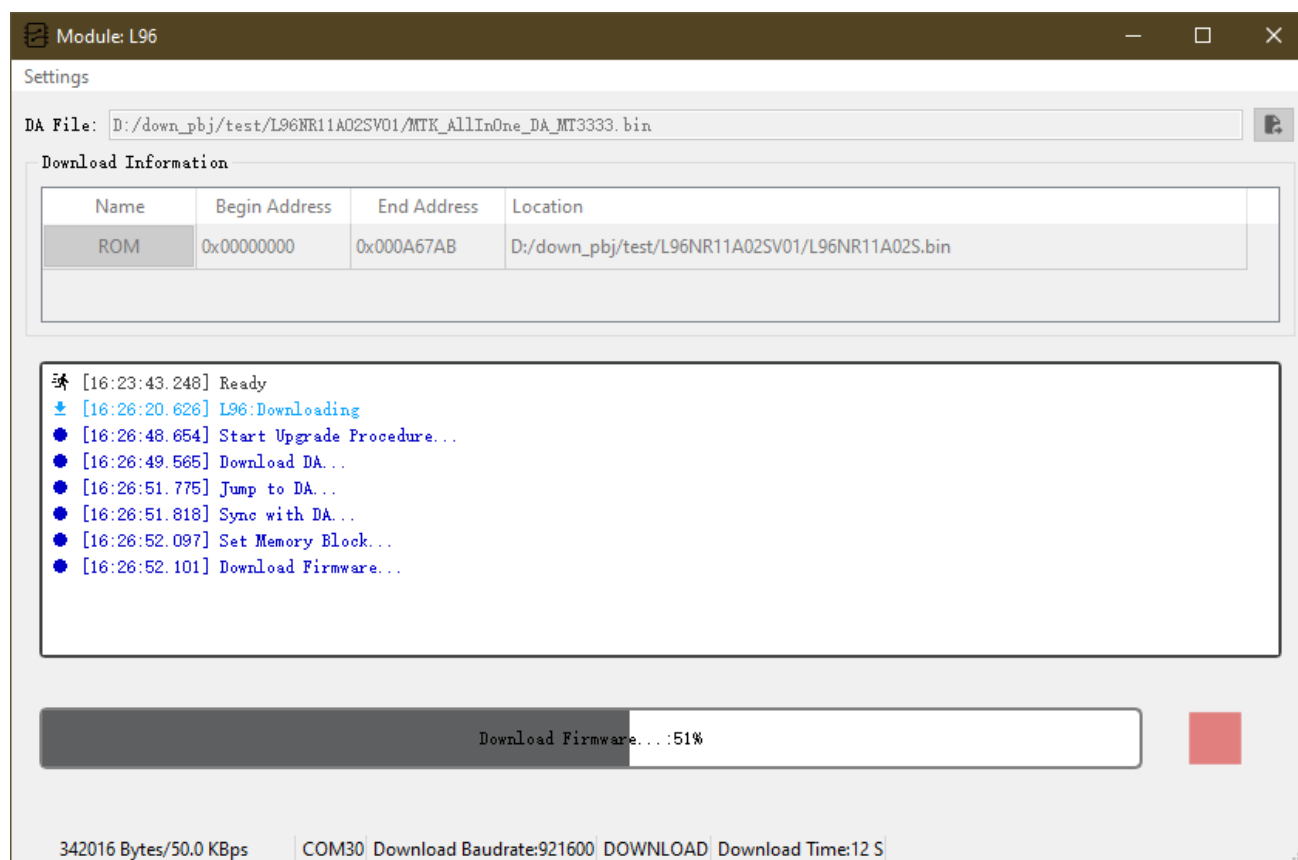


Figure 16: Waiting for Upgrading to Complete

**Step 12:**Firmware upgrade is successful.

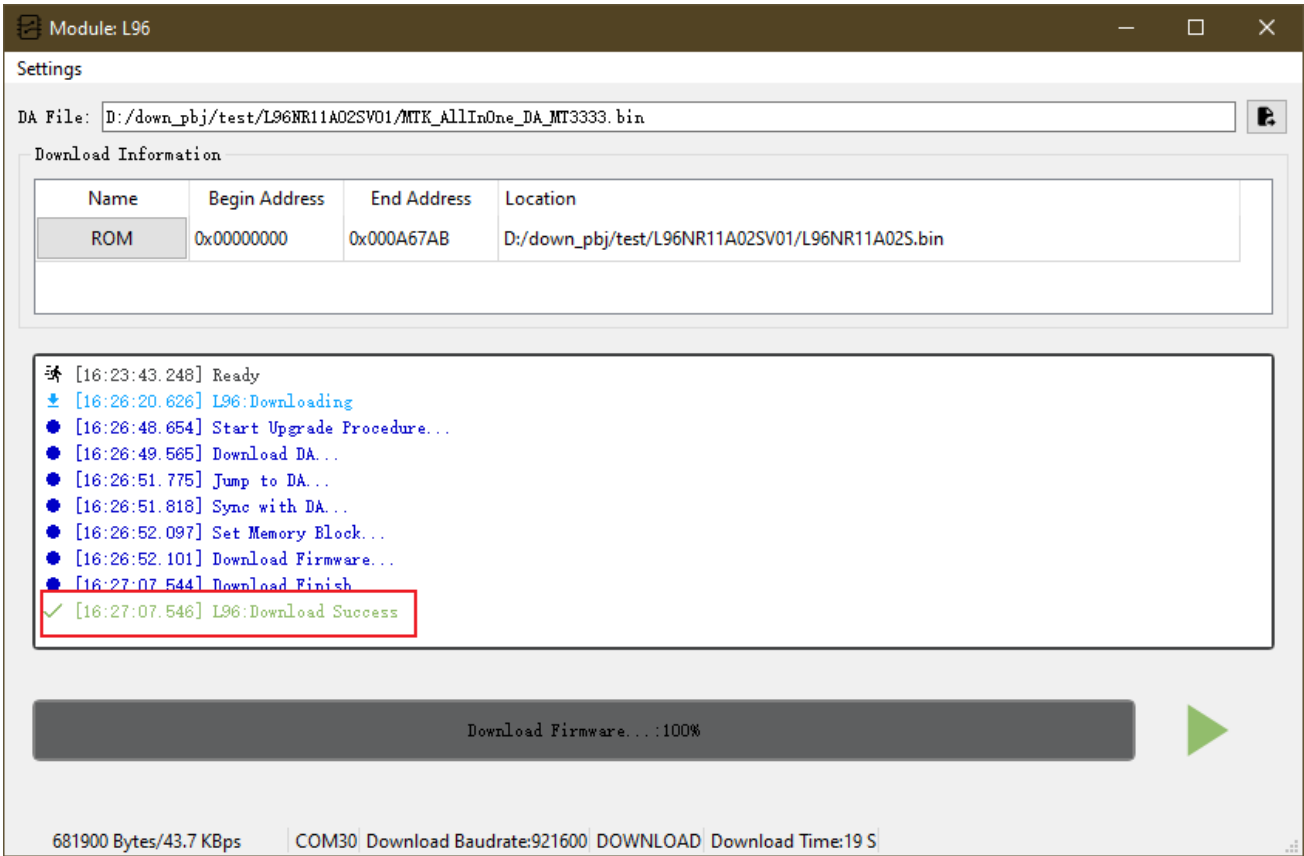


Figure 17: Firmware Upgrade Completed



# 5 Appendix A Reference

Table 1: Terms and Abbreviations

Abbreviation	Description
ACK	Acknowledge
DA	Download Agent
FOTA	Firmware Over the Air
GNSS	Global Navigation Satellite System
NACK	Negative Acknowledge
SRAM	Static Random-access Memory
UART	Universal Asynchronous Receiver/Transmitter